

Important Notice for BMC “ADMIN” Login Credentials

Supermicro has implemented new security feature enhancements on this product that will change the current default BMC login credentials to a **unique password** for the ADMIN user.

BMC barcode labels (see Figure 1) displaying the unique password for the ADMIN user may be found on this product in Location 1 or Location 2 listed below:



Figure 1: BMC barcode label displaying BMC MAC address and ADMIN user unique password

Location 1. On the system motherboard (exact label locations will vary depending on the motherboard model)

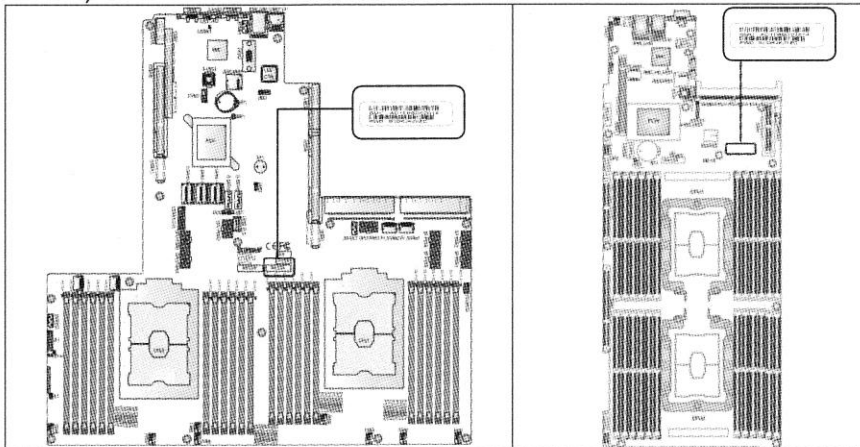


Figure 2: BMC barcode labels located on the motherboard

Location 2. On the system service tag or chassis (exact label locations will vary depending on the system model)

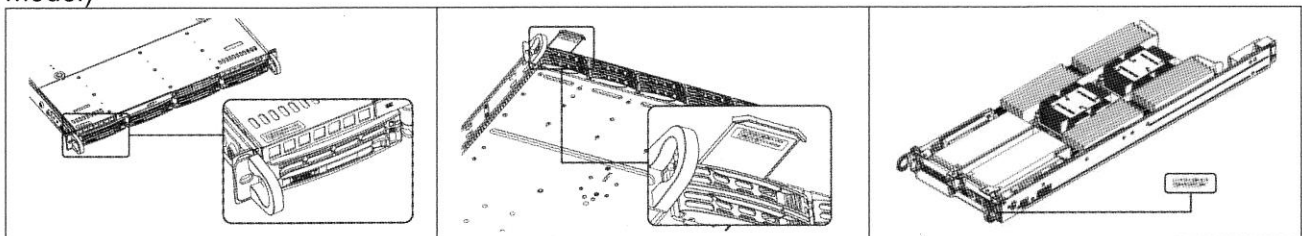


Figure 3: BMC barcode labels located on the chassis service tag and chassis